


ACOUSTIC PANEL FIXINGS INSTRUCTIONS

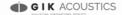




# **CONTENTS**

- Sawtooth Hangers
- French Cleats
- 8 Boom Stand Brackets
- Ceiling Cloud Brackets
- Wooden Legs Stand
- Portable Isolation Booth
- Picture Wire & Hooks
- Soffit Keyholes
- Freestanding Panel Feet


# SAWTOOTH HANGERS




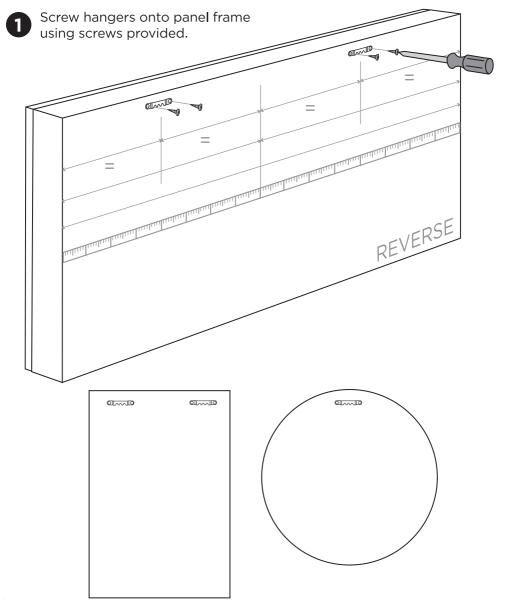





2 Drill holes in wall correct distance apart from centre of each sawtooth hanger. Ensure correct plugs and screws are used for wall type.

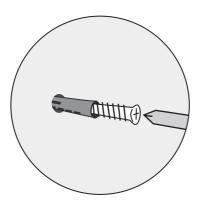

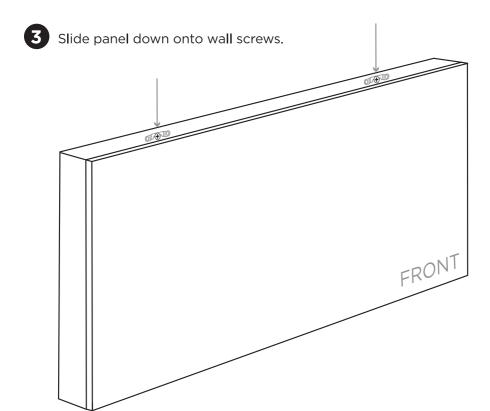


# FRENCH CLEATS

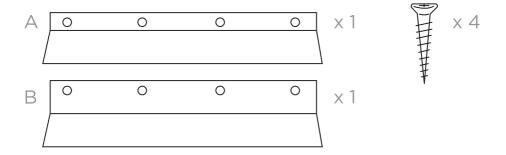


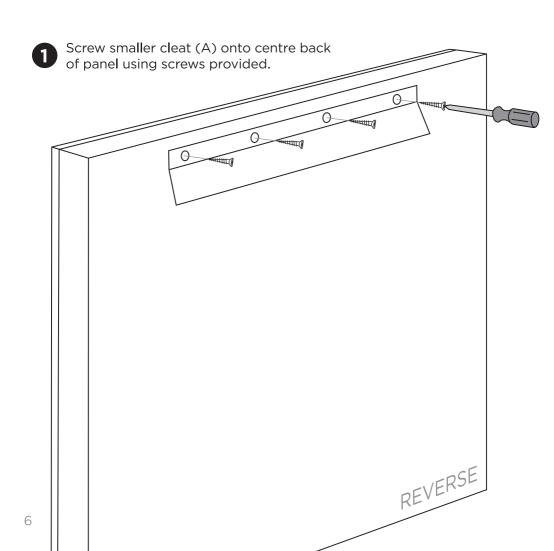


Attach larger cleat (B) to wall using correct plugs and screws for wall type.

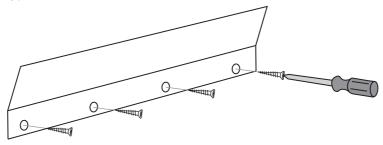


Slide panel down onto wall cleat so cleats interlock. Panel can be adjusted left or right without tipping.

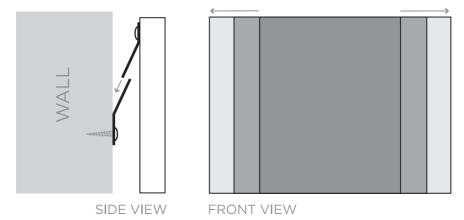


French cleats can also be used to fit corner Tri Trap panels. Remove plastic protective sheet from top and bottom of panel. Fix cleats as per previous instructions (1-3) on 2 sides.

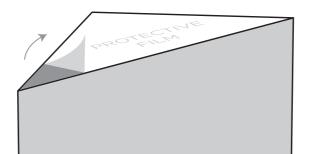


#### **BOOM STAND BRACKETS**

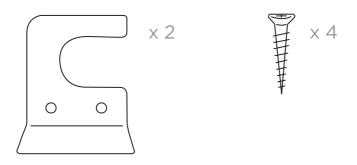


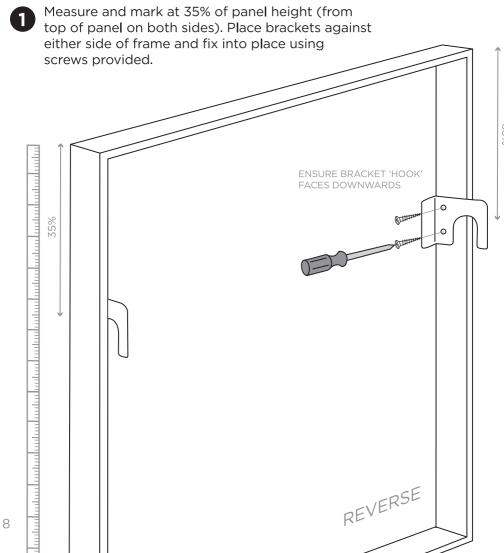





2 Set boom stand so the boom is horizontal and wider than the panel.

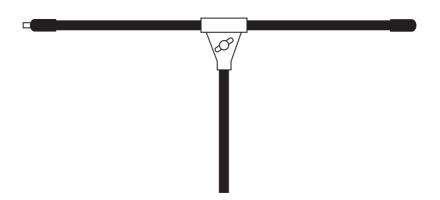

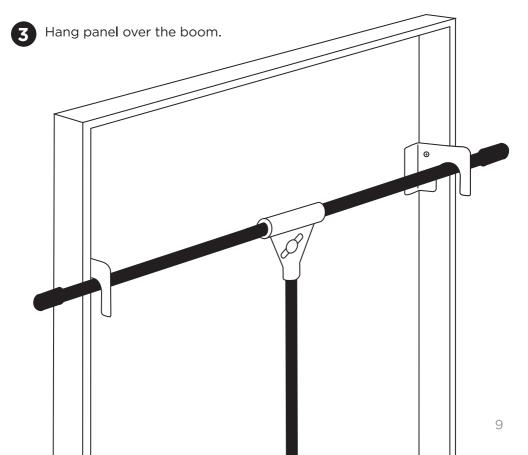


# **CEILING CLOUD BRACKETS**

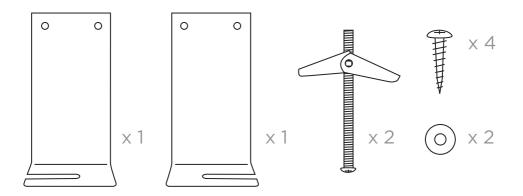

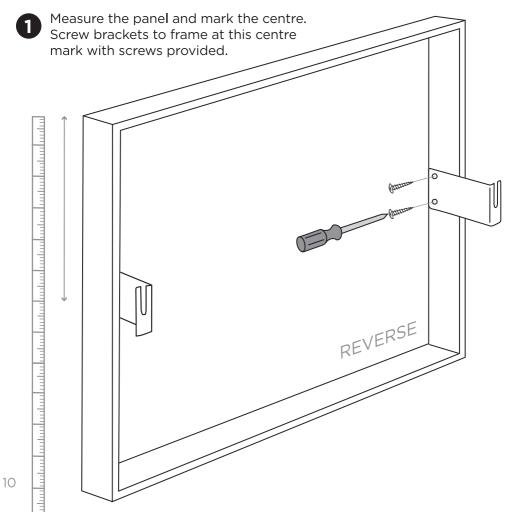




Measure between the 2 brackets and then mark this measurement on the ceiling where you'll need to install the toggle bolts. Use a 15mm drill bit to make the holes. Ensure the washer is next to the screw head on the toggle bolt then slide it up into the hole, pulling it down to secure.

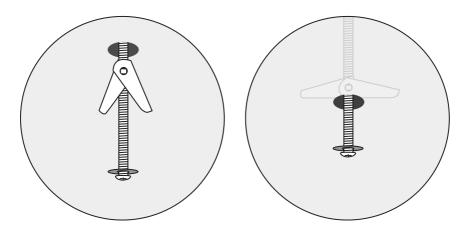


PLEASE NOTE: These toggle bolts are for plasterboard ceilings only.


Please use correct fixings for ceiling type.

Lift panel up into position, slide brackets onto screws between washers and ceiling. Tighten both screws to secure panel in place.

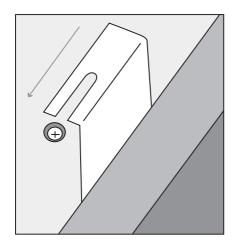


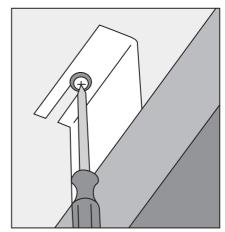

# WOODEN LEGS STAND

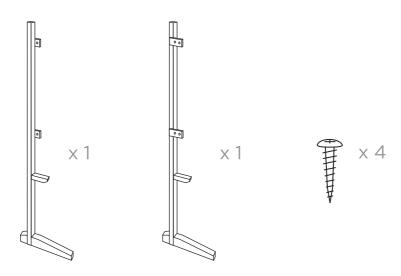


Place panel on its side. Position leg next to panel with foot facing towards front and support strut flush against bottom of panel. Screw in place using screws provided.

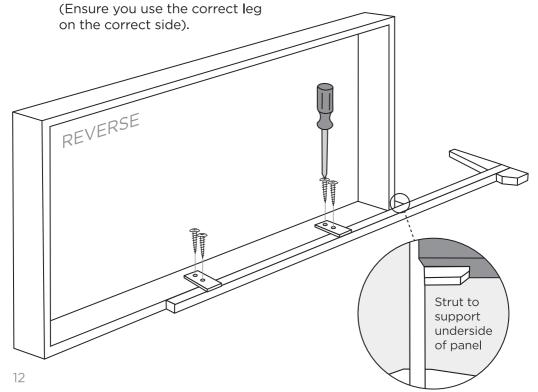




- 2 Flip the panel over and repeat the steps on the other side.
- Stand the panel up on its legs and place against a wall for extra support.

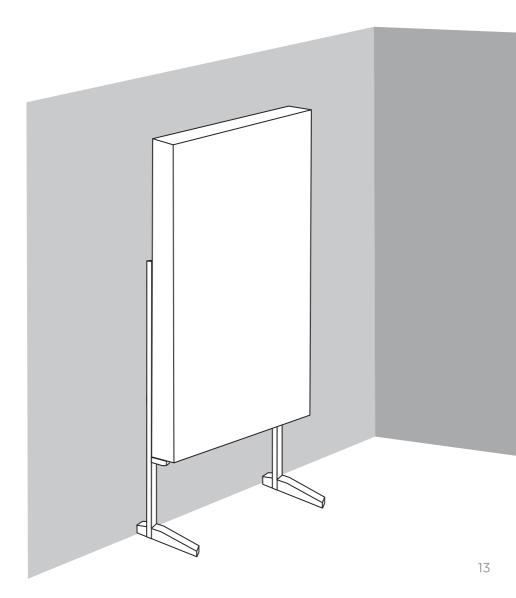



# PORTABLE ISOLATION BOOTH

1 Your booth will arrive folded.

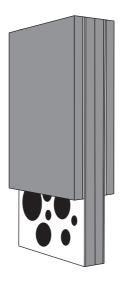


To set up, simply pull sides apart to a 90° angle with hinge at back and flip both sides up vertically.

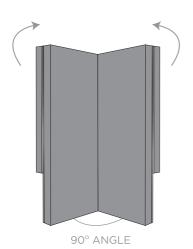

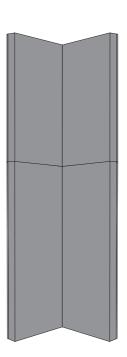





Secure top and bottom panels with side latches.

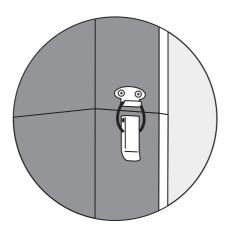


Slide pre-fixed supporting slat across to sit between the 2 panels for additional support.

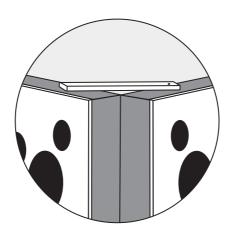

#### PICTURE WIRE & HOOKS

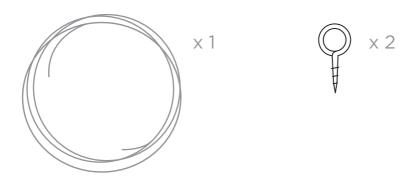


Place wire through one of the pre-installed eye hooks and tie 3 or 4 knots on each side.

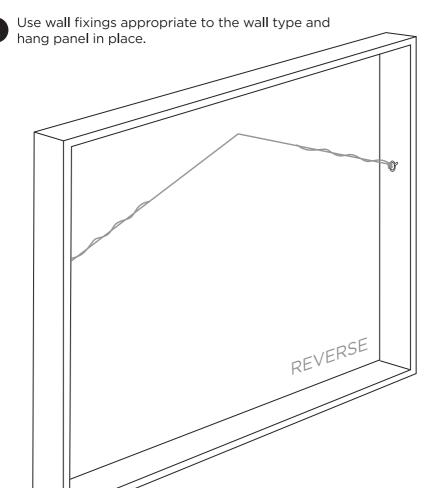


#### SOFFIT KEYHOLES


Our bass traps have built in keyhole slots on either side. Stickers indicate where the keyhole is so you can cut through the fabric covering to expose the hole.

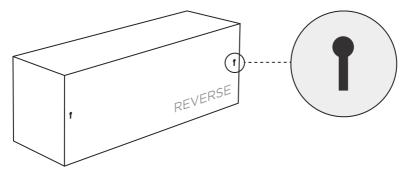

Measure width between centres of keyholes and mark on wall.
Use appropriate screws and plugs for wall type. Check screw head fits through keyhole and along channel comfortably before fixing.

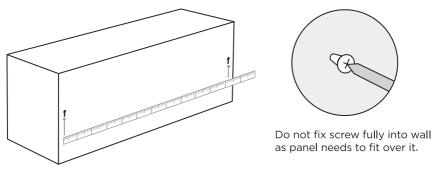


3 Push panel onto screws and pull downwards to secure into place.

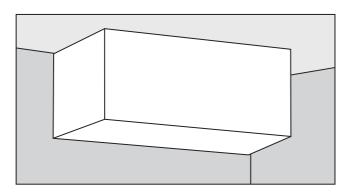


#### FREESTANDING PANEL FEET




Remove protective film covering from feet.

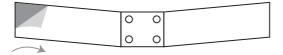

Screws come pre-drilled in the panel. Turn panel onto side, undo screws, line up pre-drilled feet holes with panel holes and screw into place securely.

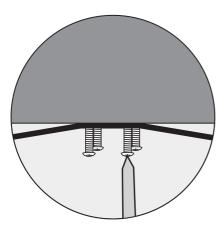

3 Stand upright on feet.

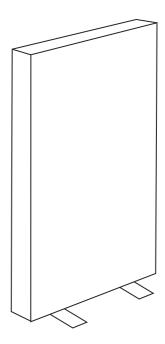



For a full list of which fixings are required for each of our acoustic panels please go to:

gikacoustics.co.uk

speak to one of our experts on:

+44 (0) 20 3815 8608

OR

check out our instructional videos on our You Tube channel.



**GIK Acoustics Europe Ltd** Unit F, Perseverance Mills, Giles Street, Bradford, BD6 3HS

0203 815 8608 customerservice.eu@gikacoustics.com gikacoustics.co.uk







